

FIRING PIN SPRING FOR GLOCK® GEN 3

The Shadow Gunworks Firing Pin Spring is a quality replacement and fits Glock Gen 3 models. Made of 302 Stainless Steel Fits Glock Gen 3, all models Fits factory or aftermarket triggers



Attributes

- Name: [FIRING PIN SPRING FOR GLOCK® GEN 3](#)
- Manufacturer: [SHADOW SYSTEMS](#)
- Product no.: 100024241
- Mfr. No.: SG9C-01-08
- Make: Glock
- Delivery weight: 0.045kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 25mm
- UPC: 853687007097

Item details

Made in USA

Table of Contents

- Startpage
- Firing Pin Spring for Glock® Gen 3 Safety Instruction Guide
- About Us

Firing Pin Spring for Glock® Gen 3 Safety Instruction Guide

Introduction

Thank you for choosing the Shadow Gunworks Firing Pin Spring for your Glock® Gen 3. This guide provides important safety information and instructions to ensure the safe use and installation of your product. Please read this guide carefully before use.

General Safety Guidelines

- Ensure that the product is compatible with your specific Glock® Gen 3 model.
- Always handle firearms and their components with care, following all safety protocols.
- Store the firing pin spring in a safe location, away from children and unauthorized users.
- Regularly inspect the firing pin spring for signs of wear or damage before installation and use.
- If you experience any issues with the product, discontinue use immediately and seek assistance.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, such as eye protection, when handling firearms and their components.
- Keep your firearm pointed in a safe direction at all times during installation and use.
- Never attempt to modify the firing pin spring or use it in a manner other than intended.
- Ensure that the firearm is unloaded before beginning any installation or maintenance procedures.
- Be aware of your surroundings and ensure that no one is within the line of fire when using your firearm.

Instructions for Installation and Usage

Installation Instructions

1. **Gather Necessary Tools:** Ensure you have all required tools for installation, including a punch tool and a suitable work surface.
2. **Unload the Firearm:** Make sure your Glock® Gen 3 is completely unloaded.
3. **Remove the Slide:** Follow the manufacturer's instructions to safely remove the slide from the frame.
4. **Remove the Old Firing Pin Spring:** Use the punch tool to carefully remove the existing firing pin spring.
5. **Install the New Firing Pin Spring:**
 - Align the new firing pin spring with the firing pin assembly.
 - Press the spring into place until it is securely fitted.
6. **Reassemble the Firearm:** Follow the manufacturer's instructions to reattach the slide to the frame.
7. **Function Check:** Conduct a function check to ensure the firearm operates correctly with the new firing pin spring.

Usage Instructions

- Always follow the manufacturer's guidelines for operating your Glock® Gen 3.
- Regularly check the firing pin spring for proper function and any signs of wear.
- If you notice any malfunctions, cease use immediately and consult a qualified gunsmith.

Disposal Instructions

- Dispose of the old firing pin spring and any packaging materials in accordance with local regulations.
- Do not dispose of the firing pin spring in regular household waste. Check with local authorities for proper

disposal methods for metal components.

Contact Information for Further Support

For any questions or concerns regarding the Firing Pin Spring for Glock® Gen 3, please consult the manufacturer's website or contact your local dealer for assistance.

Thank you for prioritizing safety while using the Shadow Gunworks Firing Pin Spring. Your adherence to these guidelines helps ensure a safe and enjoyable experience.

About Us

Brownells Deutschland

**Brownells Deutschland - Einer der größten Lieferanten für Waffenteile,
Büchsenmacherwerkzeug & Schießsportzubehör**

Lahnstraße 1
24539 Neumünster
Deutschland

www.brownells-deutschland.de