

LOCK-N-LOAD AP SHELLPLATE - #36 LOCK-N-LOAD SHELLPLATE

[Reloading](#) > [Shellholders & Shellplates](#)

Shell plates for Lock-N-Load AP and Pro-Jector are available to fit most calibers. Each shell plate will also hold additional calibers with the same case head dimensions. Current shell plates are designed to fit Lock-N-Load AP (both EZ-Ject and wire ejector models) and Pro-Jector presses. These shell plates require the purchase of the 749-012-552 Hornady Auto press retrofit kit if your press still has the OLD STYLE SPRING TYPE CARTRIDGE CASE EJECTOR SYSTEM. If you have any questions please contact your Sinclair tech 800-717-8211. View Hornady Shellplate Chart.



Attributes

- Name: [#36 LOCK-N-LOAD SHELLPLATE](#)
- Manufacturer: [HORNADY](#)
- Product no.: 100031900
- Mfr. No.: 392636
- Cartridge: -
- Style: Press Type
- Delivery weight: 0.254kg
- Shipping height: 13mm
- Shipping width: 102mm
- Shipping length: 127mm
- UPC: 090255926361

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [LOCKNLOAD AP SHELLPLATE #36 Safety Instruction Guide](#)
- [About Us](#)

LOCKNLOAD AP SHELLPLATE #36 Safety Instruction Guide

Introduction

Thank you for choosing the LOCKNLOAD AP SHELLPLATE #36. This product is designed for use with the LockNLoad AP and Projector presses. To ensure safe and effective use of this product, please read and follow these safety instructions carefully.

General Safety Guidelines

- Ensure that the shell plate is compatible with your press model before use.
- Always wear appropriate safety gear, including safety glasses, when operating reloading equipment.
- Keep the work area clean and free from obstructions to prevent accidents.
- Store all reloading components, including shell plates, out of reach of children and vulnerable individuals.
- Regularly inspect the shell plate for signs of wear or damage before each use.
- Follow all manufacturer instructions for your specific press model.

Specific Safety Precautions for Use

- **Compatibility Check:** Ensure you have the correct shell plate for your caliber and press model.
- **Ejector System:** If your press has the old style spring type cartridge case ejector system, you must purchase the 749012552 Hornady Auto press retrofit kit.
- **Handling:** Handle the shell plates with care to avoid injury. Sharp edges may be present.
- **Assembly:** Follow the assembly instructions carefully to avoid improper installation, which could lead to accidents.
- **DistractionFree Environment:** Always work in a distractionfree environment to maintain focus on the task at hand.

Instructions for Installation and Usage

1. Installation:

- Ensure your press is turned off and unplugged.
- Remove any existing shell plate from the press.
- Align the new LOCKNLOAD AP SHELLPLATE #36 with the mounting points on your press.
- Secure the shell plate in place according to the press manufacturer's instructions.
- If applicable, install the retrofit kit for the ejector system.

2. Usage:

- Load the appropriate caliber and ensure it fits securely in the shell plate.
- Follow the reloading process as outlined in your press manual.
- Monitor the operation closely for any signs of malfunction or unusual noise.
- After use, clean the shell plate and store it in a safe location.

Disposal Instructions

- Dispose of the shell plate in accordance with local regulations.
- Do not dispose of in regular household waste if the product is damaged or broken.
- Check with local waste management authorities for proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the LOCKNLOAD AP SHELLPLATE #36, please refer to the manufacturer's website or contact their customer support for assistance.

Thank you for your attention to these safety guidelines. By following these instructions, you can help ensure a safe and effective reloading experience.

About Us

Brownells Česká republika

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.cz