

LOCK-N-LOAD AP SHELLPLATE - #46 LOCK-N-LOAD SHELLPLATE

[Reloading](#) > [Shellholders & Shellplates](#)

Shell plates for Lock-N-Load AP and Pro-Jector are available to fit most calibers. Each shell plate will also hold additional calibers with the same case head dimensions. Current shell plates are designed to fit Lock-N-Load AP (both EZ-Ject and wire ejector models) and Pro-Jector presses. These shell plates require the purchase of the 749-012-552 Hornady Auto press retrofit kit if your press still has the OLD STYLE SPRING TYPE CARTRIDGE CASE EJECTOR SYSTEM. If you have any questions please contact your Sinclair tech 800-717-8211. View Hornady Shellplate Chart.



Attributes

- Name: [#46 LOCK-N-LOAD SHELLPLATE](#)
- Manufacturer: [HORNADY](#)
- Product no.: 100031901
- Mfr. No.: 392646
- Cartridge: -
- Style: Press Type
- Delivery weight: 0.254kg
- Shipping height: 25mm
- Shipping width: 102mm
- Shipping length: 127mm
- UPC: 090255926460

Item details

Made in USA

Table of Contents

- Startpage
- LOCKNLOAD AP SHELLPLATE #46 Safety Instruction Guide
- About Us

LOCKNLOAD AP SHELLPLATE #46 Safety Instruction Guide

Introduction

Thank you for choosing the LOCKNLOAD AP SHELLPLATE #46. This product is designed to enhance your reloading experience with the LockNLoad AP and Projector presses. To ensure safe and effective use of this product, please read and follow the safety guidelines and instructions outlined in this document.

General Safety Guidelines

- Always use the shellplate in accordance with the manufacturer's instructions.
- Keep the shellplate out of reach of children and vulnerable individuals.
- Inspect the shellplate regularly for wear or damage before each use.
- Ensure that your reloading press is compatible with the shellplate model.
- Do not attempt to modify the shellplate or use it in ways other than intended.
- Report any unsafe conditions or accidents to the relevant authorities.

Specific Safety Precautions for Use

- Ensure that you have the correct retrofit kit (749012552) if your press has the old style spring type cartridge case ejector system.
- Use only the recommended calibers that fit the shellplate to prevent malfunctions.
- Always wear appropriate safety gear, such as safety glasses, when reloading.
- Keep the work area clean and organized to avoid accidents.
- Do not overload the press or exceed the manufacturer's specifications for use.

Instructions for Installation and Usage

1. Installation:

- Ensure your reloading press is turned off and unplugged.
- Remove the old shellplate from your press if applicable.
- Align the new LOCKNLOAD AP SHELLPLATE #46 with the mounting points on your press.
- Securely fasten the shellplate according to the manufacturer's instructions.
- If using an old style spring type cartridge case ejector system, install the 749012552 retrofit kit before proceeding.

2. Usage:

- Before starting, doublecheck that the shellplate is properly installed and secured.
- Load the appropriate caliber into the shellplate.
- Follow the reloading process as per the instructions provided with your press.
- After use, remove the shellplate and clean it to maintain its performance.

Disposal Instructions

- Dispose of the shellplate in accordance with local regulations.
- Do not dispose of the shellplate in regular household waste if it is damaged or contains hazardous materials.
- Consider recycling options if available in your area.

Contact Information for Further Support

For any questions or concerns regarding the LOCKNLOAD AP SHELLPLATE #46, please contact your Sinclair tech at 8007178211.

Thank you for prioritizing safety and compliance while using the LOCKNLOAD AP SHELLPLATE #46. Your attention to these guidelines will help ensure a safe and enjoyable reloading experience.

About Us

Brownells Česká republika

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.cz