

POCKET PRO CARRYING CASE - COMPETITION ELECTRONICS

POCKET PRO CARRYING CASE

[Shooting Accessories](#) > [Range Gear](#) > [Shot Timers](#)

This handy case will protect your timer during transport and storage. It features a zipper storage compartment for spare batteries, velcro belt strap, and a Competition Electronics embroidered logo.



Attributes

- Name: [COMPETITION ELECTRONICS POCKET PRO CARRYING CASE](#)
- Manufacturer: [COMPETITION ELECTRONICS](#)
- Product no.: 225000003
- Mfr. No.: CEI-4707
- Colour: Black
- Style: Accessories
- Delivery weight: 0.113kg
- Shipping height: 58mm
- Shipping width: 107mm
- Shipping length: 145mm
- UPC: 787735047073

Item details

Made in USA

Table of Contents

- Startpage
- POCKET PRO CARRYING CASE SAFETY INSTRUCTIONS
- About Us

POCKET PRO CARRYING CASE SAFETY INSTRUCTIONS

Introduction

Thank you for choosing the POCKET PRO CARRYING CASE by Competition Electronics. This case is designed to protect your timer during transport and storage. To ensure safe use and longevity of the product, please read and follow these safety instructions carefully.

General Safety Guidelines

- Ensure that the carrying case is used only for its intended purpose.
- Regularly inspect the case for any signs of wear or damage before use.
- Keep the case away from extreme temperatures and moisture to prevent damage.
- Store the case in a safe place, out of reach of children and pets.
- Familiarize yourself with the product features and components before use.

Specific Safety Precautions for Use

- Do not overload the zipper storage compartment with excessive weight, as this may cause it to break or malfunction.
- Ensure that spare batteries are stored securely in the designated compartment to avoid leakage or damage.
- Use the velcro belt strap responsibly and ensure it is securely fastened before carrying.
- Avoid using the case in environments where it may be exposed to chemicals or corrosive substances.
- If the case becomes damaged, discontinue use and replace it.

Instructions for Installation and Usage

1. Unpacking the Case

- Carefully remove the carrying case from its packaging.
- Inspect the case for any visible damage or defects.

2. Storing Your Timer

- Open the zipper storage compartment.
- Place your timer inside the main compartment, ensuring it fits snugly.
- Store spare batteries in the designated compartment, ensuring they are secured.

3. Using the Velcro Belt Strap

- Attach the velcro belt strap to your belt or bag.
- Ensure it is fastened securely to prevent the case from falling during use.

4. Transporting the Case

- Carry the case using the handles provided, ensuring it is secure.
- Avoid placing heavy objects on top of the case during transport.

5. Cleaning the Case

- Wipe the exterior of the case with a damp cloth to remove dirt.
- Allow the case to air dry completely before storing.

Disposal Instructions

- Dispose of the carrying case in accordance with local waste management regulations.
- If the case is damaged beyond repair, consider recycling the materials where possible.
- Do not dispose of batteries in regular waste. Follow local guidelines for battery disposal.

Contact Information for Further Support

For any safety inquiries or concerns regarding the POCKET PRO CARRYING CASE, please refer to the manufacturer's contact information provided with the product.

Conclusion

By following these safety instructions, you can ensure the safe and effective use of your POCKET PRO CARRYING CASE. Regular maintenance and responsible usage will help prolong the life of your product. Thank you for your attention to these guidelines.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk