

AR-15 A2 REAR SIGHT BASE SPRING PIN - LUTH-AR A2 REAR SIGHT BASE SPRING PIN

[Rifle Parts](#) > [Sights](#) > [Sight Parts](#) > [Sight Pins](#)

Ensure the reliable operation of your AR-15 with our high-quality forward assist / A2 rear sight pin. This durable accessory is essential for proper installation of your forward assist in your rifle and is also used for your A2 rear sight base spring pin. Easy to install, this is a must-have item for any serious rifle owner. *Note this pin is used for either a forward assist, or the rear base spring in an A2 rear sight.



Attributes

- Name: [LUTH-AR A2 REAR SIGHT BASE SPRING PIN](#)
- Manufacturer: [LUTH-AR](#)
- Product no.: 430104757
- Mfr. No.: UR06
- Colour: Natural
- Weapon type: AR-15
- Delivery weight: 0.045kg
- Shipping height: 25mm
- Shipping width: 25mm
- Shipping length: 25mm
- UPC: 859992007838

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for AR15 A2 Rear Sight Base Spring Pin
- About Us

Safety Instruction Guide for AR15 A2 Rear Sight Base Spring Pin

Introduction

Thank you for choosing the AR15 A2 Rear Sight Base Spring Pin by LUTHAR. This guide provides essential safety instructions to ensure the safe and effective use of the product. Please read this document carefully before installation and use.

General Safety Guidelines

- Ensure the product is suitable for your specific AR15 model.
- Always handle firearms and accessories safely, following local laws and regulations.
- Inspect the product for any damage before use. Do not use if damaged.
- Keep the product out of reach of children and unauthorized users.
- Report any unsafe product incidents to the appropriate authorities.
- Stay informed about recalls by checking the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Use the spring pin only for its intended purpose: either for the forward assist or the A2 rear sight base spring.
- Do not modify the spring pin in any way, as this may compromise safety and functionality.
- Wear safety glasses when installing or handling firearm parts to protect your eyes from potential debris.
- Ensure that the firearm is unloaded before installation or maintenance.
- Avoid using excessive force during installation to prevent damage to the firearm or accessory.

Instructions for Installation and Usage

1. Prepare for Installation

- Ensure your AR15 is pointed in a safe direction and is unloaded.
- Gather necessary tools, such as a punch tool and hammer.

2. Installing the Spring Pin

- Align the spring pin with the designated hole for the forward assist or A2 rear sight base.
- Gently tap the spring pin into place using the punch tool and hammer.
- Ensure the pin is flush with the surface to avoid interference with other components.

3. PostInstallation Check

- Verify that the spring pin is securely in place and not protruding.
- Conduct a function check of the forward assist or rear sight to ensure proper operation.

4. Using the Product

- Use the forward assist or rear sight as intended, following the manufacturer's guidelines for your AR15.

Disposal Instructions

- Dispose of the spring pin in accordance with local regulations concerning metal waste.

- Do not dispose of the product in regular household waste. Check for recycling facilities that accept metal components.

Contact Information for Further Support

For any questions or concerns regarding the AR15 A2 Rear Sight Base Spring Pin, please refer to the product packaging for contact information or visit the manufacturer's website.

Thank you for your attention to these safety instructions. Proper use and care will help ensure the longevity and reliability of your AR15 accessory.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk