

# BRASS LARGE LOOP 30-30 WINCHESTER LEVER ACTION RIFLE - BRASS LARGE LOOP 30-30 WINCHESTER 20" BBL 5RD LEVER ACTION

[Firearms](#) > [Rifles](#) > [Lever Action](#)

From the Northwoods to the Texas hill country and in every deer camp and lodge in between, the .30-30 rifle remains the perennial choice of whitetail hunters. More than just another deer cartridge, the venerable .30-30 has been the king of deer calibers since the first rifle chambered in this ageless round was produced in 1894. In fact, it's a safe bet that in the past century, no other round has put more antlers on the wall and venison in the freezer than the .30-30. Like every Henry rifle, it's 100% American made, with its straight-grip American walnut stock and forearm, it is a masterpiece of finely crafted gunsmithing. The H009B has a visually impressive 20" octagon barrel and a handsome brass receiver that is drilled and tapped for easy scope mounting, and a brass barrel band. The magazine holds five rounds that chamber quickly and smoothly thanks to our crisp, perfectly machined action. If you're a deer hunter who wants to carry a rifle like dad and grandpa did back in the "good ol' days," treat yourself to a Henry .30-30 and relive the golden era of deer hunting while starting a few new traditions of your own.



## Attributes

- Name: [BRASS LARGE LOOP 30-30 WINCHESTER 20" BBL 5RD LEVER ACTION](#)
- Manufacturer: [HENRY REPEATING ARMS](#)
- Product no.: 430105719
- Mfr. No.: H009BGL
- Action Type: Lever Action
- Barrel Length: 20"
- Capacity: 5-Round
- Cartridge: 30-30 Winchester
- Finish: Brass
- Front Sight: Bead
- Length: 39"
- Magazine Included: 1 x 5-Round
- Magazine Type: Tubular
- Make: Henry
- Model: Brass
- Muzzle: Non-Threaded
- Rear Sight: Adjustable
- Stock Material: Walnut
- Weight: 8.3 lbs
- Delivery weight: 4.672kg
- Shipping height: 51mm
- Shipping width: 165mm
- Shipping length: 1,016mm
- UPC: 619835090195

## Item details

Made in USA

US export classification: 0A501.a

# Table of Contents

- Startpage
- Safety Instruction Guide for BRASS LARGE LOOP 3030 WINCHESTER LEVER ACTION RIFLE
- About Us

# Safety Instruction Guide for BRASS LARGE LOOP 3030 WINCHESTER LEVER ACTION RIFLE

## Introduction

Thank you for choosing the BRASS LARGE LOOP 3030 WINCHESTER LEVER ACTION RIFLE. This guide provides important safety instructions to ensure the safe and proper use of your rifle. Please read this manual thoroughly before using the product.

## General Safety Guidelines

- Always treat your rifle as if it is loaded.
- Keep the rifle pointed in a safe direction at all times.
- Store the rifle unloaded and in a secure location, out of reach of children and unauthorized users.
- Use only the recommended .3030 Winchester cartridges in your rifle.
- Regularly inspect your rifle for any signs of wear or damage.
- Do not modify or alter the rifle in any way.
- Always wear appropriate eye and ear protection when shooting.
- Be aware of your surroundings and ensure you have a clear line of sight before firing.
- Follow all local laws and regulations regarding firearm ownership and use.

## Specific Safety Precautions for Use

- Ensure the safety is engaged until you are ready to fire.
- Do not load the rifle until you are ready to shoot.
- Always verify the chamber is clear before loading.
- Avoid using the rifle in wet or damp conditions to prevent rust and malfunction.
- Be cautious when handling the rifle after shooting, as parts may be hot.
- Never use a damaged or malfunctioning rifle. If you suspect an issue, consult a qualified gunsmith.
- Keep your fingers off the trigger until you are ready to shoot.
- Be aware of the potential for ricochet when shooting at hard surfaces.

## Instructions for Installation and Usage

### • Loading the Rifle:

1. Ensure the rifle is pointed in a safe direction.
2. Open the action to check that the chamber is empty.
3. Load the magazine with the appropriate .3030 Winchester cartridges.
4. Close the action and ensure the rifle is ready to fire.

### • Firing the Rifle:

1. Engage the safety until you are ready to shoot.
2. Aim at your target, ensuring a clear line of sight.
3. Place your finger on the trigger only when ready to fire.
4. Squeeze the trigger smoothly to discharge the rifle.

### • Unloading the Rifle:

1. Point the rifle in a safe direction.
2. Open the action to eject any cartridges in the chamber.
3. Remove any remaining cartridges from the magazine.

4. Check the chamber to ensure it is empty.

- **Cleaning and Maintenance:**

1. Follow the manufacturer's recommendations for cleaning and maintenance.
2. Use only approved cleaning materials.
3. Store the rifle in a dry place to prevent moisture damage.

## **Disposal Instructions**

When disposing of your rifle, follow these guidelines: \* Do not dispose of the rifle in regular household waste. \* Contact local authorities or a licensed firearms dealer for proper disposal methods. \* Ensure the rifle is rendered inoperable before disposal.

## **Contact Information for Further Support**

For any safety inquiries or additional support, please refer to the contact information provided with your rifle or consult the manufacturer's website. It is important to have access to a knowledgeable source for any questions regarding safety and usage.

By following these safety guidelines and instructions, you can enjoy the use of your BRASS LARGE LOOP 3030 WINCHESTER LEVER ACTION RIFLE safely and responsibly. Thank you for your attention to these important safety measures.

# About Us

## Brownells Austria

**Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

[www.brownells.at](http://www.brownells.at)