

"DIRTY BIRD" TARGETS - BIRCHWOOD CASEY DIRTY BIRD 5.5" TARGETS 12 PK

[Shooting Accessories](#) > [Targets & Accessories](#) > [Paper Targets](#)

These targets are named from the splattering of white that appears around each bullet impact. The black and white contrast makes visual inspection easy from shot to shot. Cost is less than regular Shoot-N-C targets making these a great value. Works well for both indoor and outdoor shooting. Non-adhesive back. Great for shooting long range.



Attributes

- Name: [BIRCHWOOD CASEY DIRTY BIRD 5.5" TARGETS 12 PK](#)
- Manufacturer: [BIRCHWOOD CASEY](#)
- Product no.: 749001350
- Mfr. No.: BC-35504
- Style: Sight-In
- Target Size/Type: Small Less Than 8
- Type: Papers
- Quantity: 12
- Delivery weight: 0.272kg
- Shipping height: 5mm
- Shipping width: 307mm
- Shipping length: 315mm
- UPC: 029057355048

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for DIRTY BIRD Targets](#)
- [About Us](#)

Safety Instruction Guide for DIRTY BIRD Targets

Introduction

Thank you for choosing the DIRTY BIRD Targets by Birchwood Casey. These targets are designed for both indoor and outdoor shooting, providing excellent visibility for shot placement. To ensure your safety and the safety of others while using this product, please read the following guidelines carefully.

General Safety Guidelines

- Always handle firearms responsibly and in accordance with local laws and regulations.
- Ensure that the shooting area is safe and free from obstructions.
- Always wear appropriate safety gear, including eye and ear protection.
- Keep the shooting range clear of unauthorized personnel, especially children.
- Be aware of your surroundings and ensure the target area is secure before shooting.
- Follow all manufacturer instructions for the safe use of firearms and shooting accessories.

Specific Safety Precautions for Use

- Ensure targets are securely positioned and stable before shooting.
- Do not use targets that are damaged or have been previously shot.
- Avoid shooting at targets at close range; maintain a safe distance.
- Do not use targets in environments where ricochets or stray bullets could pose a risk to others.
- Dispose of used targets responsibly to prevent littering and environmental harm.

Instructions for Installation and Usage

1. Installation:

- Choose a suitable location for target placement, ensuring it is safe and secure.
- Use a backstop to catch stray bullets and prevent injury or property damage.
- Position the DIRTY BIRD target at an appropriate height and distance based on your shooting needs.

2. Usage:

- Ensure all shooters are aware of the target location before firing.
- After each round, visually inspect the target for bullet impacts to assess accuracy.
- If using multiple targets, space them adequately to avoid confusion and enhance safety.

Disposal Instructions

- Dispose of used DIRTY BIRD targets in accordance with local waste disposal regulations.
- Recycle materials where possible to minimize environmental impact.
- Do not burn used targets as they may contain materials that are harmful when incinerated.

Contact Information for Further Support

For any safety inquiries or concerns regarding the DIRTY BIRD targets, please refer to the contact details provided on the packaging or visit the manufacturer's website.

Conclusion

By following these safety instructions, you can ensure a safer shooting experience with DIRTY BIRD targets. Always prioritize safety and responsibility while enjoying your shooting activities. Thank you for your commitment to safe practices.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk