

LOCK-N-LOAD IRON PRESS KIT AUTO PRIME - LOCK-N-LOAD IRON PRESS KIT W/AUTO PRIME

[Reloading](#) > [Reloading Presses](#) > [Single Stage Presses](#)

Iron Press™ is built to be the heaviest, most rigid press in its class. Tight tolerances in manufacture and assembly combine to provide consistency and precision that will deliver match accurate ammunition, round-after-round, year-after-year. The available gravity fed Automatic Priming System (sold separately or with the Lock-N-Load® Iron Press™ Reloading Kit), combined with the Accessory Mounting Deck, increases reloading efficiency by allowing more processes to occur simultaneously. The Iron Press™ is the first of its kind to allow the ability to deprime, pause and remove the case to chamfer & deburr etc., then replace and prime. The Accessory Mounting Deck provides the hand loader with many options for quick access to items such as trays for bullets or cases, chamfer and deburr tools, case neck brushes, primer pocket cleaners and many more. Further ease of use comes from exclusive features such as a spring assist 1 1/8" solid steel ram and the patented Shell Holder Platform. And, as with all Hornady® metallic reloading presses, the Iron Press™ comes with the patented Lock-N-Load® bushing system that makes changeovers lightning fast. Kit Includes: Automatic Priming System Die caddy Component feed bin & bracket Digital Scale Case prep accessories (chamfer & deburr tool / large & *small primer pocket cleaners / neck brushes [22 cal / 25 cal\6mm / 270 cal\7mm / 30 cal / 35 cal / 45 cal] Powder Measure Reloading Handbook Unique™ Case lube Lock-N-Load® Comparator set of 6 Lock-N-Load® Die Bushings 3 pk Powder funnel 22-45 cal Digital caliper Shell holder kit (#1, #2, #5, # 16, #35)



Attributes

- Name: [LOCK-N-LOAD IRON PRESS KIT W/AUTO PRIME](#)
- Manufacturer: [HORNADY](#)
- Product no.: 749016385
- Mfr. No.: 085521
- Delivery weight: 19.278kg
- Shipping height: 203mm
- Shipping width: 457mm
- Shipping length: 533mm
- UPC: 090255855210

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [LOCKNLOAD IRON PRESS KIT AUTO PRIME Safety Instructions](#)
- [About Us](#)

LOCKNLOAD IRON PRESS KIT AUTO PRIME Safety Instructions

Introduction

Thank you for choosing the LOCKNLOAD IRON PRESS KIT AUTO PRIME. This product is designed to provide you with a safe and efficient reloading experience. Please read this safety instruction guide carefully to ensure safe usage and compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Always read and understand the instruction manual before using the product.
- Ensure that the workspace is clean, dry, and wellventilated.
- Keep the product out of reach of children and vulnerable individuals.
- Use the product only for its intended purpose as described in the manual.
- Regularly inspect the product for any signs of damage or wear.
- In case of malfunction or damage, discontinue use immediately and seek professional assistance.
- Report any unsafe products or accidents to the appropriate authorities.
- Stay informed about recall updates via the EU Safety Gate platform.

Specific Safety Precautions for Use

- Always wear safety glasses when operating the reloading press to protect your eyes from debris.
- Ensure that the press is securely mounted to a stable surface before use.
- Do not overload the press beyond its specified capacity.
- Handle all reloading components, such as primers and powder, with care to avoid accidental ignition.
- Keep all reloading materials away from heat sources and open flames.
- Avoid distractions while using the press to maintain focus and precision.
- Use the Automatic Priming System only as instructed in the manual.
- Ensure that all tools and accessories are compatible with the LOCKNLOAD IRON PRESS KIT.

Instructions for Installation and Usage

• Installation:

1. Choose a stable and level surface for mounting the press.
2. Securely attach the press using the provided mounting hardware.
3. Install the Accessory Mounting Deck as per the instructions in the manual.
4. Ensure all components are properly aligned and tightened before use.

• Usage:

1. Prepare your workspace by organizing all necessary tools and materials.
2. Set up the Automatic Priming System according to the manual's instructions.
3. Load the case into the press and ensure it is properly seated.
4. Follow the steps for reloading as outlined in the Reloading Handbook included in the kit.
5. Regularly check for proper operation and adjust as necessary.
6. After use, clean the press and store it in a safe location.

Disposal Instructions

- Dispose of all used reloading components, such as primers and powder, in accordance with local regulations.

- Do not dispose of materials in regular household waste.
- Contact local waste management authorities for proper disposal methods for hazardous materials.

Contact Information for Further Support

For any questions or concerns regarding the LOCKNLOAD IRON PRESS KIT AUTO PRIME, please refer to the contact information provided in the product documentation. Ensure you have the product details ready for a more efficient support experience.

Thank you for prioritizing safety while using the LOCKNLOAD IRON PRESS KIT AUTO PRIME. Enjoy your reloading experience!

About Us

Brownells Česká republika

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.cz