

PROGRESSIVE PRESS EZ PRIME - MEC RELOADING PROGRESSIVE PRESS EZ PRIME

[Reloading](#) > [Reloading Presses](#) > [Reloading Press Accessories](#)

PROGRESSIVE PRESS EZ PRIME



Attributes

- Name: [MEC RELOADING PROGRESSIVE PRESS EZ PRIME](#)
- Manufacturer: [MEC RELOADING](#)
- Product no.: 749019380
- Mfr. No.: 385CA
- Delivery weight: 0.408kg
- Shipping height: 89mm
- Shipping width: 114mm
- Shipping length: 254mm
- UPC: 098489016414

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for PROGRESSIVE PRESS EZ PRIME](#)
- [About Us](#)

Safety Instruction Guide for PROGRESSIVE PRESS EZ PRIME

Introduction

Thank you for choosing the PROGRESSIVE PRESS EZ PRIME by MEC RELOADING. This guide provides essential safety instructions and guidelines to ensure safe and effective use of your reloading press. Please read this manual carefully before using the product to ensure your safety and the safety of others.

General Safety Guidelines

- Always operate the reloading press in a wellventilated area.
- Keep the work area clean and organized to prevent accidents.
- Ensure all safety equipment is worn, including safety glasses and gloves.
- Do not allow children or untrained individuals to operate the reloading press.
- Regularly inspect the press for signs of wear or damage before each use.
- Follow all manufacturer instructions for setup, operation, and maintenance.
- Report any unsafe conditions or accidents to the appropriate authorities.
- Stay informed about product recalls and safety updates through the EU Safety Gate platform.

Specific Safety Precautions for Use

- Ensure the press is securely mounted to a stable work surface before use.
- Avoid wearing loose clothing or jewelry that could become entangled in the machinery.
- Do not overload the press beyond its specified capacity.
- Use only compatible components and materials as specified by the manufacturer.
- Keep fingers and hands clear of moving parts during operation.
- Do not attempt to modify or alter the reloading press in any way.
- Always follow proper procedures for handling and storing reloading materials.

Instructions for Installation and Usage

1. Installation

- Choose a stable and level surface for mounting the reloading press.
- Securely attach the press using appropriate fasteners as indicated in the manufacturer's instructions.
- Ensure that the press is positioned for comfortable operation and access to all controls.

2. Usage

- Familiarize yourself with all controls and safety features before operating the press.
- Load materials according to the manufacturer's guidelines, ensuring correct placement.
- Operate the press with a steady and controlled motion, avoiding sudden movements.
- Always keep the work area clear of unnecessary tools and materials during operation.
- When finished, clean the press and surrounding area to prevent buildup of debris.

Disposal Instructions

- Dispose of any packaging materials in accordance with local recycling regulations.
- If the reloading press reaches the end of its life, dispose of it in line with local waste disposal regulations.
- Do not dispose of hazardous materials used in conjunction with the press in regular waste. Follow local guidelines for hazardous waste disposal.

Contact Information for Further Support

For any questions or concerns regarding the PROGRESSIVE PRESS EZ PRIME, please refer to the manufacturer's website or contact their customer support team for assistance. It is important to have a reliable source for any safety inquiries or product issues.

By adhering to these safety guidelines and instructions, you can ensure a safe and effective experience with your PROGRESSIVE PRESS EZ PRIME. Thank you for prioritizing safety in your reloading activities.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk