

366 AUTO PRECISION SHOTSHELL PRESS - 28 GAUGE SHOTSHELL RELOADING PRESS

[Reloading](#) > [Reloading Presses](#) > [Shotshell Presses](#)

Whether you want to reload affordable target loads, high-quality hunting shells, or you're an advanced reloader who wants to make your own deer slugs, Hornady's 366 Auto Progressive Reloader will turn out ammunition in assembly line fashion with a factory-tight finish. Simply place empty shell casings, wad and shot into place, and pull the handle to send the cases around this circular-designed reloader that automatically drops completed shells into a handy box when they are done. The swing-out wad guide gives you instant access for wad placement. The large-capacity powder and shot hopper tubes have baffles that allow powder and shot to flow smoothly for uniform loads. A three-stage taper-loc-crimping device crimps, closes and tapers your shot shells. Lever switchable for right- or left-handed users. Manual shut-offs for powder and shot. Easy-to-change standard bushings make it easy to switch over to other popular shot sizes or powders. The 366 Auto even lets you choose whether you want to resize your shells to factory dimensions or skip this step altogether. A shot drain catches spilled shot at the edge of the shell plate. Features: Automatic Primer Feed System Easy-Empty Powder and Shot Hopper Tubes 3-Stage Taper-Loc Crimping Spring-Loaded Seater Punch Swing-out Wad Guide Automatic Indexing Full length Resizing Station Automatic Shell Ejection



Attributes

- Name: [28 GAUGE SHOTSHELL RELOADING PRESS](#)
- Manufacturer: [HORNADY](#)
- Product no.: 749101003
- Mfr. No.: 010046
- Gauge: 28 Gauge
- Delivery weight: 14.039kg
- Shipping height: 305mm
- Shipping width: 406mm
- Shipping length: 508mm
- UPC: 090255010466

Item details

Made in USA
EU Export Disabled

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for the 366 AUTO PRECISION SHOTSHELL PRESS](#)
- [About Us](#)

Safety Instruction Guide for the 366 AUTO PRECISION SHOTSHELL PRESS

Introduction

Thank you for choosing the 366 Auto Precision Shotgun Press. This guide provides essential safety instructions to ensure the safe and effective use of your reloading press. Please read this guide carefully to understand the safety precautions and operational procedures.

General Safety Guidelines

- Always read and understand the user manual before operating the reloading press.
- Ensure that the workspace is clean, welllit, and free from distractions.
- Keep the reloading area secure and out of reach of children and unauthorized users.
- Use personal protective equipment (PPE) such as safety glasses and gloves while operating the press.
- Regularly inspect the equipment for any signs of wear or damage before use.
- Follow all local laws and regulations regarding ammunition reloading.
- Store all components, including powder and primers, in a cool, dry place away from direct sunlight.

Specific Safety Precautions for Use

- **Hazard Awareness:** Be aware of the potential hazards associated with reloading, including the risk of fire and explosion from improper handling of gunpowder and primers.
- **Avoid Overloading:** Do not exceed the recommended load specifications for your shotshells.
- **Proper Ventilation:** Ensure adequate ventilation in the reloading area to avoid inhalation of powder dust or fumes.
- **No Smoking:** Never smoke or have open flames near your reloading equipment or materials.
- **Handling Components:** Handle all reloading components with care, following the manufacturer's instructions.
- **Emergency Procedures:** Familiarize yourself with emergency procedures in case of an accident, including how to safely extinguish a fire.

Instructions for Installation and Usage

1. Installation:

- Mount the 366 Auto Precision Shotgun Press securely to a sturdy workbench or table.
- Ensure that the press is level and stable to prevent accidents during operation.
- Connect the automatic primer feed system according to the manufacturer's instructions.

2. Setup:

- Select the appropriate bushings for the shot size or powder you are using.
- Adjust the power and shot hopper tubes to the desired settings.
- Load the empty shell casings, wad, and shot into the designated areas of the press.

3. Operation:

- Pull the handle to activate the reloading process, ensuring that the shell casings move smoothly through the reloader.
- Monitor the operation for any irregularities or malfunctions during use.
- After completing the reloading process, ensure that all completed shells are collected safely in the designated box.

4. Maintenance:

- Clean the press regularly to prevent buildup of powder residue and ensure smooth operation.
- Lubricate moving parts as recommended in the user manual.
- Store the press in a safe and dry location when not in use.

Disposal Instructions

- Dispose of any unused or expired reloading components according to local regulations.
- Do not dispose of gunpowder or primers in regular trash. Contact local authorities for proper disposal methods.
- Recycle any metal components where applicable, following local recycling guidelines.

Contact Information for Further Support

For any questions or concerns regarding the operation or safety of your 366 Auto Precision Shotshell Press, please refer to the manufacturer's contact information provided with your product.

By following these safety instructions, you can ensure a safe and efficient reloading experience with your 366 Auto Precision Shotshell Press. Always prioritize safety and stay informed about best practices in ammunition reloading.

About Us

Brownells Deutschland

**Brownells Deutschland - Einer der größten Lieferanten für Waffenteile,
Büchsenmacherwerkzeug & Schießsportzubehör**

Lahnstraße 1
24539 Neumünster
Deutschland

www.brownells-deutschland.de