

VF Mainspring for Ruger Pistols, 22/45, Black

[Handgun Parts](#) > [Frame Parts](#) > [Mainspring Parts](#) > [Mainsprings](#)

VF Mainspring for Ruger Pistols, 22/45, Black



Complete mainspring assembly designed for the Ruger MKII or MKIII. Mainspring components are wire EDM-cut and CNC-machined.

Our mainspring does not feature the lock feature found on the Ruger factory MKIII Mainspring.

Attributes

- Name: [VF Mainspring for Ruger Pistols, 22/45, Black](#)
- Manufacturer: [VOLOQUARTSEN](#)
- Product no.: BRD231087
- Mfr. No.: VC3MSR-45-B
- Color: Black
- Make: Ruger
- Model: MKII, MKIII
- Delivery weight: 0.4kg
- UPC: 810162013479

Table of Contents

- Startpage
- Safety Instruction Guide for VF Mainspring for Ruger Pistols, 22/45
- About Us

Safety Instruction Guide for VF Mainspring for Ruger Pistols, 22/45

Introduction

Thank you for choosing the VF Mainspring for Ruger Pistols, 22/45. This product is designed to enhance the performance of your Ruger MKII or MKIII. Please read this safety instruction guide carefully to ensure safe and effective use of the mainspring.

General Safety Guidelines

- Always ensure the firearm is unloaded before installing or handling the mainspring.
- Keep the mainspring and all firearm components out of reach of children and unauthorized users.
- Inspect the mainspring for any signs of damage before use. Do not use if damaged.
- Follow all local laws and regulations regarding the use and modification of firearms.
- Report any unsafe products or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Do not attempt to modify the mainspring. Alterations can lead to malfunction and injury.
- Wear appropriate safety gear, including eye protection, when handling firearms.
- Ensure that the workspace is clear of any distractions or hazards.
- When handling the firearm, always keep the muzzle pointed in a safe direction.
- Be aware of your surroundings and ensure a safe environment when using the firearm.

Instructions for Installation and Usage

Installation

1. Preparation:

- Ensure the firearm is completely unloaded.
- Gather necessary tools, including a screwdriver and any other required equipment.

2. Disassembly:

- Follow the manufacturer's instructions to disassemble the firearm safely.
- Carefully remove the existing mainspring from the firearm.

3. Installation of VF Mainspring:

- Align the VF Mainspring with the designated area in the firearm.
- Secure the mainspring in place using the appropriate screws or fasteners as per the manufacturer's guidelines.
- Doublecheck that the mainspring is properly installed and secured.

4. Reassembly:

- Follow the manufacturer's instructions to reassemble the firearm.
- Ensure all components are correctly installed and functioning.

Usage

- After installation, conduct a function check to ensure the mainspring operates correctly.

- If you experience any issues or malfunctions, discontinue use immediately and consult a qualified gunsmith.

Disposal Instructions

- Dispose of the mainspring and any packaging materials in accordance with local regulations.
- Do not dispose of the mainspring in regular household waste. Check for designated disposal sites for firearm components.

Contact Information for Further Support

For any inquiries regarding the VF Mainspring for Ruger Pistols, 22/45, please refer to the manufacturer's website or contact their support team for assistance. Ensure you have the product details on hand for a more efficient response.

Thank you for your attention to these safety instructions. Your safety and the safe operation of your firearm are our top priorities.

About Us

Brownells Deutschland

**Brownells Deutschland - Einer der größten Lieferanten für Waffenteile,
Büchsenmacherwerkzeug & Schießsportzubehör**

Lahnstraße 1
24539 Neumünster
Deutschland

www.brownells-deutschland.de