

VF Mainspring for Ruger Pistols, 22/45 - Stainless - Ruger - MKII, MKIII

[Handgun Parts](#) > [Frame Parts](#) > [Mainspring Parts](#) > [Mainsprings](#)

VF Mainspring for Ruger Pistols, 22/45



Complete mainspring assembly designed for the Ruger MKII or MKIII. Mainspring components are wire EDM-cut and CNC-machined.

Our mainspring does not feature the lock feature found on the Ruger factory MKIII Mainspring.

Attributes

- Name: [VF Mainspring for Ruger Pistols, 22/45 - Stainless - Ruger - MKII, MKIII](#)
- Manufacturer: [VOLQUARTSEN](#)
- Product no.: BRD231511
- Mfr. No.: VC3MSR-45-S
- Color: Stainless
- Make: Ruger
- Model: MKII, MKIII
- Delivery weight: 400g
- UPC: 810162013486

Table of Contents

- Startpage
- VF Mainspring for Ruger Pistols Safety Instruction Guide
- About Us

VF Mainspring for Ruger Pistols Safety Instruction Guide

Introduction

Thank you for choosing the VF Mainspring for Ruger Pistols, 22/45. This guide provides essential safety instructions and information to ensure the safe use of your mainspring assembly designed for the Ruger MKII and MKIII models. Please read this guide carefully before installation and use.

General Safety Guidelines

- Ensure that all safety precautions are followed during installation and use.
- Always handle firearms responsibly and in accordance with local laws and regulations.
- Keep the mainspring and all firearm components out of reach of children and unauthorized users.
- Regularly check the mainspring for any signs of wear or damage before use.
- Report any unsafe product experiences to the appropriate authorities.

Specific Safety Precautions for Use

- Do not use the mainspring if it appears damaged or defective.
- Always wear appropriate safety gear, including eye protection, when handling firearms.
- Ensure that the firearm is unloaded before performing any maintenance or installation of the mainspring.
- Avoid using excessive force during installation to prevent damage to the mainspring or firearm.
- Do not modify the mainspring or any associated components; modifications can lead to unsafe conditions.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is completely unloaded.
- Gather all necessary tools for installation, including a screwdriver and any other required equipment.

2. Installation:

- Remove the grip panels of the Ruger MKII or MKIII to access the mainspring housing.
- Carefully remove the existing mainspring from the housing.
- Install the VF Mainspring by placing it into the housing in the correct orientation.
- Reassemble the grip panels, ensuring all screws are tightened securely.

3. Usage:

- After installation, perform a function check to ensure the firearm operates correctly.
- Follow the manufacturer's guidelines for the safe operation of your Ruger pistol.
- Regularly inspect the mainspring for any signs of wear or damage before each use.

Disposal Instructions

- Dispose of the mainspring responsibly at a designated recycling or hazardous waste facility.
- Do not dispose of the mainspring in regular household waste.
- Ensure that all components are disposed of in accordance with local regulations.

Contact Information for Further Support

For any questions regarding the VF Mainspring for Ruger Pistols or to report any safety concerns, please contact the manufacturer or your local dealer for assistance.

Thank you for prioritizing safety and responsible firearm handling.

About Us

Brownells Deutschland

**Brownells Deutschland - Einer der größten Lieferanten für Waffenteile,
Büchsenmacherwerkzeug & Schießsportzubehör**

Lahnstraße 1
24539 Neumünster
Deutschland

www.brownells-deutschland.de